



e-TRANS-200 TRANSCEIVER

QUICK START GUIDE

Specifications

Voltage:	10-36V ACDC
Current draw standby:	Radio Awake state 16 m/a – Radio Sleep state 4.5 m/a
Frequency:	433 MHz
Remote storage:	200 remotes / 4 x e-Loops / 4 x Keypads / 4 x Entry Buttons
Remote storage allocation:	Each remote can be set to a unit number ID
Relay:	1-amp contact rating, COM and N/O connections x 2 relays (Pulse, Latch and Hold modes)
e-Loop:	Connect direct to e-Loop to alter settings
Lock out function:	Ability to lock certain coded devices by remote

Coding device

To code device: Rotate dial clockwise to CODE DEVICE then press PB (remote Push Button). CODE LEARN will display and green LED will flash indicating coding sequence.



To code remote handset:

Press remote button once > display will show ACCEPT REM 1, then screen will display CONFIRM REM 1. Press remote button again and screen will display REM 1 CODED. You can then follow on with a second remote in which ACCEPT REM 2 will display. If no further remote buttons are pressed, CODE DEVICE will exit back to main screen after 5 seconds.



To code e-Loop – first option:

Rotate dial to CODE DEVICE then hold e-Loop next to the Transceiver antenna. Now press PB and release. Display will show E-LOOP CODED. CODE DEVICE will exit and return to main screen.



To code e-Loop – second option:

Rotate dial to CODE DEVICE then press PB, CODE LEARN will be displayed. Now press and release e-Loop CODE button. Screen will display E-LOOP CODED and will exit back to main screen, (for commercial e-Loop, use the magnet provided to activate the CODE button)

