

# Specifications

Frequency:	433.39 MHz
Security:	128-bit AES encryption
Range:	up to 50 metres
Battery life:	up to 10 years
Battery type:	Lithium ion 3.6V 2600 mA x 4



## e-LOOP Fitting Instructions

### Step 1 - Coding e-LOOP

#### Option 1. Short range coding with magnet

1. Power up the e-Trans 50, then press and release the **CODE** button. The blue LED on the e-Trans 50 will light up, now place the magnet on the **CODE** recess on the e-Loop, the yellow LED will flash, and the blue LED on the e-Trans 50 will flash 3 times. The systems are now paired, and you can remove the magnet.

#### Option 2. Long range coding with magnet (up to 50 Meters)

1. Power up the e-Trans 50, then place the magnet on the code recess of the e-Loop, the yellow code LED will flash once now remove magnet and the LED come on solid, now walk over to the e-Trans 50 and press and release the **CODE** button, the yellow LED will flash and the blue LED on the e-Trans 50 will flash 3 times, after 15 seconds the e-loop code LED will turn off .

### Step 2 - Fitting e-LOOP

1. Place e-LOOP device in the desired location and secure into the ground using 2 Dyna bolts. Ensure the e-LOOP device is secured and can't be moved when touched.

**NOTE :** Never fit near high voltage cables, this can affect the e-LOOP's detection capability.

### Step 3 - Calibrate e-LOOP

1. Move any metal objects away from the e-LOOP.
2. Place magnet into the **SET** button recess on the e-LOOP until red LED flashes twice, then remove the magnet.
3. The e-LOOP will take about 5 seconds to calibrate and once complete, the red LED will flash 3 times.

**NOTE:** After calibration you may get an error indication.


**ERROR 1:** Low radio range - Yellow LED flashes 3 times.

**ERROR 2:** No radio connection - Yellow and Red LED flashes 3 times.

**System is now ready.**

### Uncalibrate e-LOOP

1. Place magnet into the **SET** button recess until red LED flashes 4 times, e-LOOP is now uncalibrated.

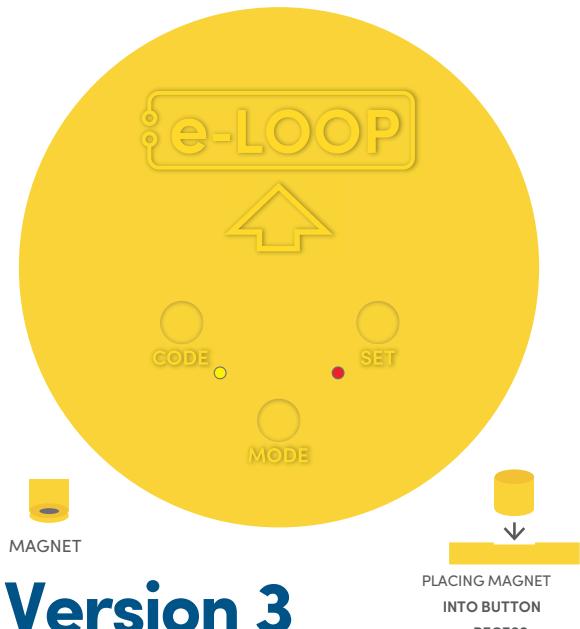

## Version 3

### Changing Mode

The e-LOOP is set to exit mode for the EL00C, and set to presence mode for the EL00C-RAD as default. To change the mode from presence mode to exit mode on the EL00C-RAD e-LOOP, use the menu via the **e-TRANS-200** or the **Diagnostics** remote.

**NOTE:** Do not use presence mode as a personal safety function.

### Changing Mode using magnet (EL00C-RAD Only)

1. Place a magnet on the **MODE** recess until the yellow starts LED flashing indicating presence mode, to change to exit mode place the magnet on the **SET** recess, the red LED will start flashing, to change to parking mode place the magnet on the **MODE** recess, the Yellow LED will come on solid.
2. Wait 5 seconds until all LED's flash, we have now entered the confirmation menu, move to Step 3 or wait a further 5 seconds until all LED's flash 3 times to exit menu.
3. Confirmation menu  
Once in the confirmation menu the red LED will be on solid meaning confirmation is not enabled, to enable place magnet on code recess, the yellow LED and red LED will be on, confirmation is now enabled, wait 5 seconds and both LED's will flash 3 times indicating menu has now been exited.